



# OPERATING MANUAL

*Autoplus* Auto Series | Air+Surface Sterilizer

Congratulations on your purchase of the **MedKlinn Autoplus Air+Surface Sterilizer**! It incorporates the most innovative and latest air cleaning technology, the Cerafusion™ Technology. Please read the following instructions carefully before using the unit. With a little care, it will provide you with many years of clean, fresh and healthy living spaces.

## **WARNINGS**

1. Do not insert any sharp or pointed object through the ventilation holes of the devices. Doing so may cause electric shock and damage of the device.
2. Do not allow children to play the device.
3. Do not immerse the unit in water, or allow water or any fluids to enter the unit.
4. Do not modify, disassemble or repair this unit by yourself.
5. Do not attempt to open the unit. The unit requires minimal maintenance, and no servicing or repairs are to be carried out by the user. Opening the device or tampering with it in any way will cause the Warranty to become void. If you encounter any problems with the unit, please contact your nearest authorized Medklinn service center.

## **CAUTIONS DURING OPERATION**




1. Do not position the unit downward (as shown in the diagram at the left). Doing so will subject the unit to discoloration and irreparable damage.
2. Do not cover the unit in any way at all. Doing so will cause excessive heat build-up and may result in overheating and irreparable damage to the device.

**Caution: If you experience light-headedness when using this product, set the air conditioning controls to open circulation mode to allow more air flow or adjust the level to LOW.**

## DEVICE IDENTIFICATION

### AUTOPLUS


*(Front View and Side View)*

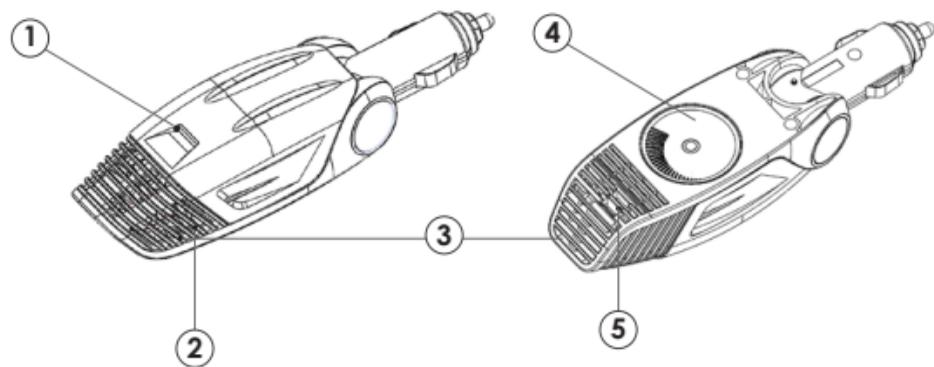

- ① LED light indicator
- ② Detachable Front Lid
- ③ Ventilation Holes
- ④ Active Control
- ⑤ Latch

### CERAFUSION™ CARTRIDGE



*(Side View)*

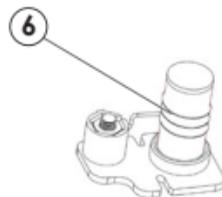

- ⑥ Glass tube


## RECOMMENDED POSITION FOR OPTIMUM PERFORMANCE

1. To enjoy refreshing air in your vehicle, insert the unit into the cigarette lighter socket. A blue LED light will appear at the front of the unit.
2. The unit can be rotated up to 90 degree to suit the configuration of your vehicle. Gently rotate the device until it reaches the desired position.

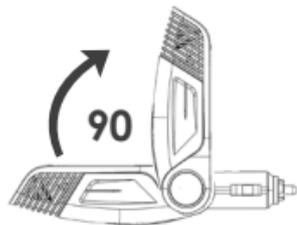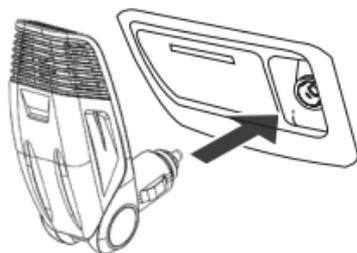

## OPERATION

1. To adjust to LOW mode, turn the Active Control anti-clockwise.
2. To adjust to HI mode, turn the Active Control clockwise.
3. To switch off, turn the Active Control anti-clockwise until you hear a "click"

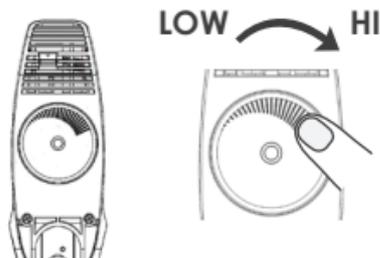


### CAUTIONS

1. Switch off and unplug the unit before cleaning
2. The Cerafusion cartridge could be hot, be careful when cleaning.
3. Do not hold the glass tube when handling the cartridge, as it will damage or crack the glass.



### CLEANING OF DEVICE


1. Wipe the device gently with a slightly damp cloth to ensure ventilation holes are not clogged with dust or dirt.
2. Push the latch slightly upward to open the detachable front lid.
3. Pull out the front lid.
4. Clean the front lid and internal surfaces with a slightly damp cloth.

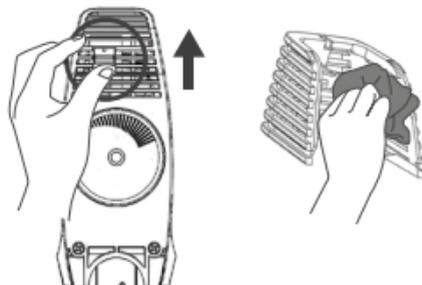

### REPLACING THE CERAFUSION™ CARTRIDGE

The Cartridge must be replaced every 12 months\* for best performance.

1. Remove the Cerafusion™ Cartridge
2. Install the new Cerafusion™ Cartridge to the designated cartridge holder as shown.

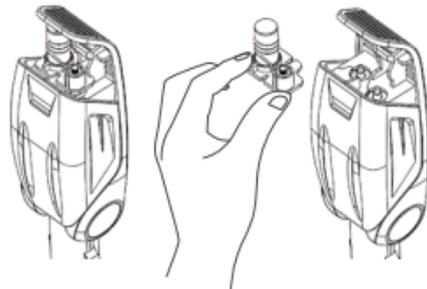

\*Subject to pollution level.

## TROUBLESHOOTING GUIDE

---

### 1. The device feels warm. Is this normal?

During normal operation, the Autoplus will be slightly warm to the touch. This heat is normal, and creates a thermal current that will efficiently disperse the active oxygen throughout the vehicle. It does not mean the device is malfunctioned.

### 2. There is a "hissing" sound coming from the device, is this normal?

Yes, it is normal. The "hissing" sound is due to device is generating the active oxygen.

### 3. I have inserted the device into the vehicle's cigarette lighter socket, but the LED light is not lit.

First, ensure the cigarette lighter socket is functioning. Then, make sure the Autoplus is securely inserted into the socket, and the vehicle's ignition is turned on. Lastly, make sure the switch is adjusted to Low/High mode.

If the LED light is still not lit, check if there is a "hissing" sound coming from the device. If there is a "hissing" sound, it mean the LED light hasfused. The device is still functioning normally. If the "hissing" sound is not detected, contact your authorized MedKlinn Service Centre.

### 4. The device is inserted and the LED light is no, but there is no "hissing" sound.

Contact your authorized MedKlinn Service Centre to have the device serviced.

### 5. I have dropped the unit. Is it safe to continue using it?

First, carefully check the whole unit to make sure there are no cracks or breaks externally and internally.

Next, check the glass tube of the cartridge to make sure it is not cracked or broken.

If there is any component damage, contact your authorized MedKlinn Service Centre.

## SPECIFICATIONS

---

**Dimension:** 16cm (W) x 3.3m (H) x 7.5cm (D); **Socket** 4.8cm; **Operating Temperature:** 5°C to 35°C; **Weight:** 83gram;  
**Input Voltage:** 12VDC; **Power Consumption:** 3.0W; **Setting:** Off/ Low / High; **Remarks:** Applicable for vehicles using 12V car battery.

[www.medkinn.com](http://www.medkinn.com)